
2134D-MI-24V Clock Dial Interface

Hookup Diagram
Doc# 11055

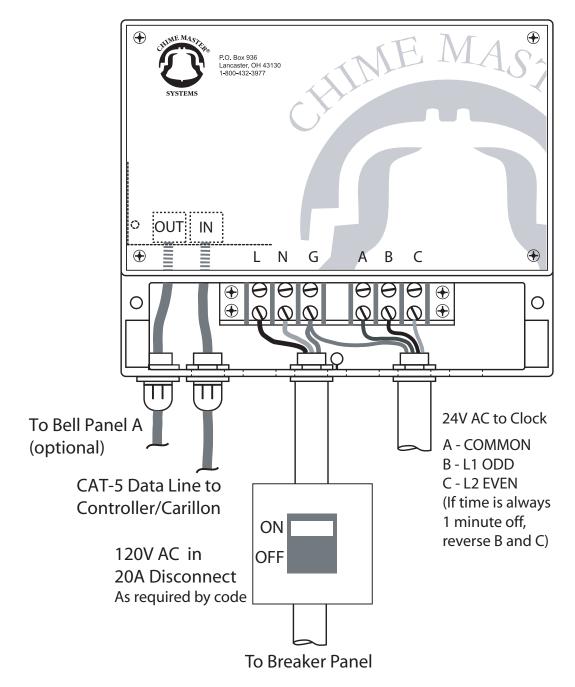

* Before Turning on Power *

Make connection to the controller/carillon and to ALL clock dial movements.

Clock dial hands should all be set to the same time (initially 12:00).

On the controller, navigate to the System Setup Menu: Set System Clock menu and press ENTER. If the time displayed is correct, press CANCEL.

The next screen should say: Tower Clock Dial Hands Indicate: 12:00

Use the cursor buttons to adjust the time to match what the hands are pointing to, then press ENTER.

* Turn power on for the clock interface box.

The hands should run fast to catch up to the current time.

If the hands are less than two hours ahead of the current time, dials will hold for the time to catch up.

