


Channel A for long Channel P for

Channel A for longthrow speakers set to high volume. Channel B for longthrow speakers set to soft volume.

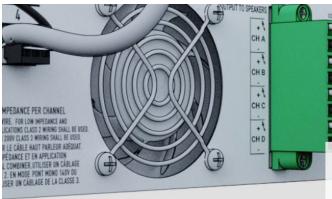

Channel D - Optional channel for interior monitor speakers.

**45**C

13

Channel C - Optional channel for single full-range speaker for outside tower.

