



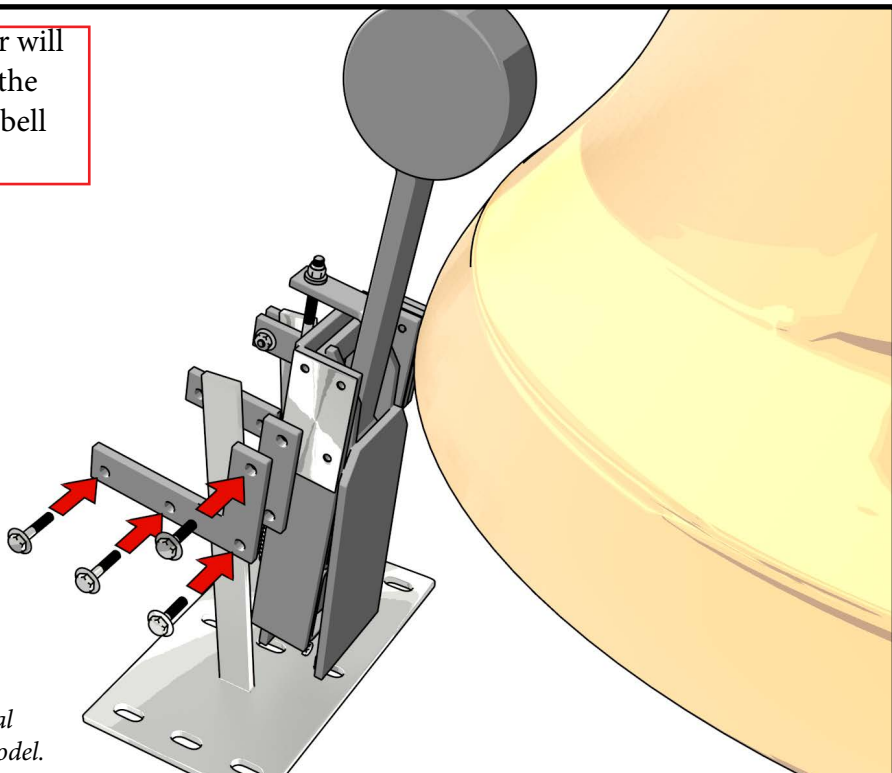


Chime Master External Hammer Installation

Position the striker so that the hammer will swing down perpendicularly toward the strike-point, this is the portion of the bell profile that is the thickest.

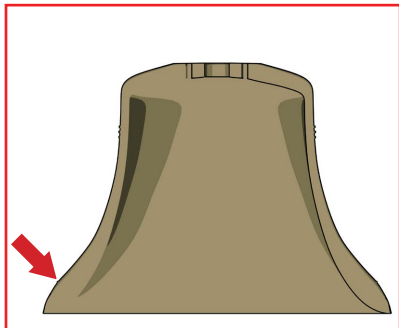

**While the striker mount may vary, the fundamental principles of adjustment remain constant for this model.*

Tighten or loosen the spring tension adjustment nut to increase or decrease the return strength of the striker hammer.

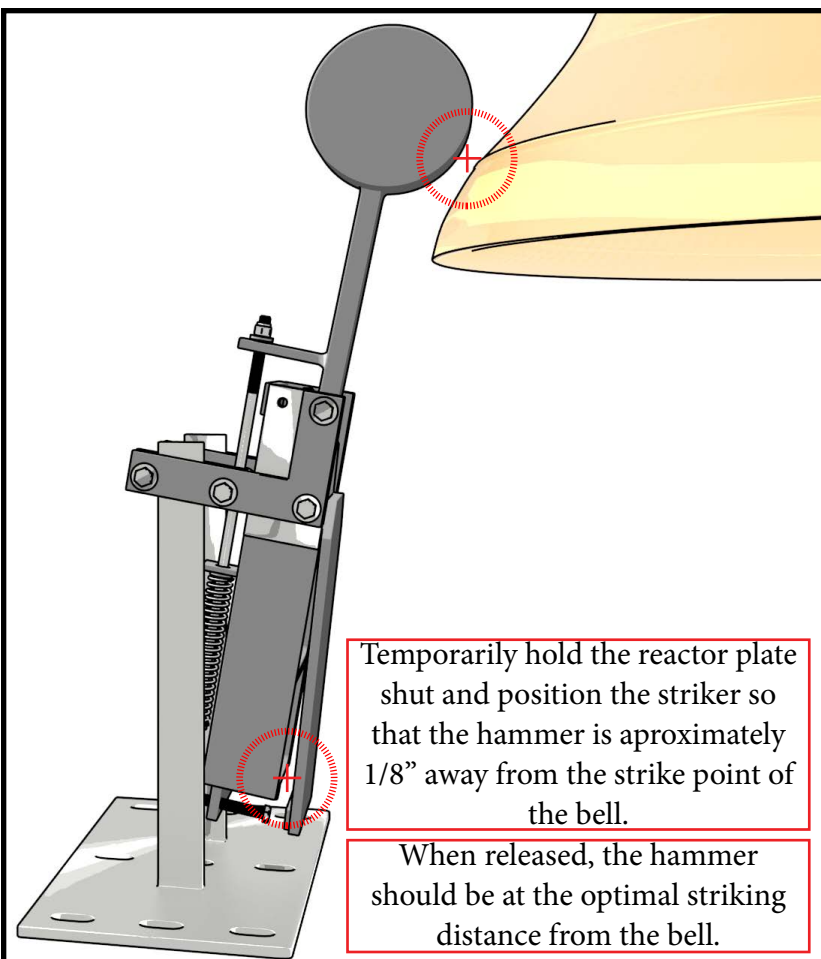

Temporarily hold the reactor plate shut and position the striker so that the hammer is approximately 1/8" away from the strike point of the bell.

When released, the hammer should be at the optimal striking distance from the bell.

