

LX Ringing and Special Functions

Ringling Functions

Swinging bells are available in two pitches. The lower bell is typically swung as a Call to Worship and the smaller bell can be used to call to classes or Sunday School.

Swing	30 sec	1 min	2 min	5 min	10 min
Bell F3	1022	1024*	1025	1028	1029
Bell A3	1052	1054	1055	1058	1059

A **Peal** consists of three or four bells ringing together in a chord. Peals are used during celebrations such as Easter, Christmas Eve and Weddings. Four traditional peals are included.

Peal	1 min	2 min	5 min	10 min
American 3	1074	1075	1078	1079
American 4	1064*	1065	1068	1069
Diatonic 3	1094	1095	1098	1099
Minor 3	0610	0611	0614	0615

American 3: F3 - A3 - C4

Diatonic 3: F3 - G3 - A3

American 4: F3 - A3 - C4 - F4

Minor 3: F3 - A ♭3 - C4

Tolls are solemn rings of a single low bell. They are used for funerals and other solemn occasions. The Slow tempo rings once every 12 seconds, Medium rings once every 9 seconds and Fast rings once every 5 seconds. The automatic schedule can be programmed to let the bell toll continuously for one, five or ten minutes. The pitch of the tolling bell is F3.

Toll	1 min	5 min	10 min
Slow	0134	0138	0139
Medium	0144	0148	0149
Fast	0154	0158	0159

In addition to scheduling timed tolls, the Play Selections menu from the Functions Buttons can be used to program a specific number of strikes. To do this, enter 0130 for a single strike and set the repeat value from 1 to 199.

Angelus bells call the community to prayer traditionally at morning, noon and evening times. Three different tempos are available to allow the appropriate amount of time between rings for each prayer. You can choose to end the prayer with 9 tolls or with a one-minute swinging bell.

Angelus Style	Slow	Medium	Fast
	(5 second tempo)	(4.5 second tempo)	(4 second tempo)
3-3-3 only	1105	1103	1101
3-3-3 - 9 tolls	1111	1109	1107
3-3-3 - swing	1117	1115	1113

Other Available Functions

De Profundis Toll	0063
Orthodox "Call to Church"	1119
Taps on Bugle.....	0165
Amazing Grace on Bagpipes	0040

Random Music Group Codes

Press the [cursor▲] button followed by [1] through [8] to program a single random music selection when the selection number is flashing in the programming menu pages.

Grp1	Sacred hymns mixed with non-sacred music, follows the almanac seasons (Sacred non-seasonal music is disabled when Easter season is disabled)
Grp2	Sacred hymns mixed with non-sacred music, always non-seasonal
Grp3	Sacred hymns only, follows the almanac seasons
Grp4	Sacred hymns only, always non-seasonal
Grp5	Non-sacred music only, will play patriotic and Christmas in season (Sacred Patriotic and Christmas music will not play)
Grp6	Non-sacred music only, always non-seasonal
Grp7	Patriotic music independent of season
Grp8	Marian hymns independent of season

Enter 70xy (with x and y from the table below) to play multiple random music selections with a single code. Since they determine the ending time of the block of music, these codes cannot be followed by any other selections at the same time slot. Any following selection codes will be ignored.

70xy Random Music Blocks

x (Length of Block)	y (Music Group)
0 Plays four selections	0 Sacred hymns alternated with non-sacred music, always non-seasonal
1 Plays until 5 min before next quarter hour (up to 10 minutes)	1 Sacred hymns mixed with non-sacred music, follows the almanac seasons
2 Plays until end of current quarter hour (up to 15 minutes)	2 Sacred hymns mixed with non-sacred music, always non-seasonal
3 Plays through current and next quarter hour (up to 30 minutes)	3 Sacred hymns only, follows the almanac seasons
	4 Sacred hymns only, always non-seasonal
	5 Non-sacred music only, will play patriotic and Christmas in season
	6 Non-sacred music only, always non-seasonal
	7 Patriotic music independent of season
	8 Marian hymns independent of season