
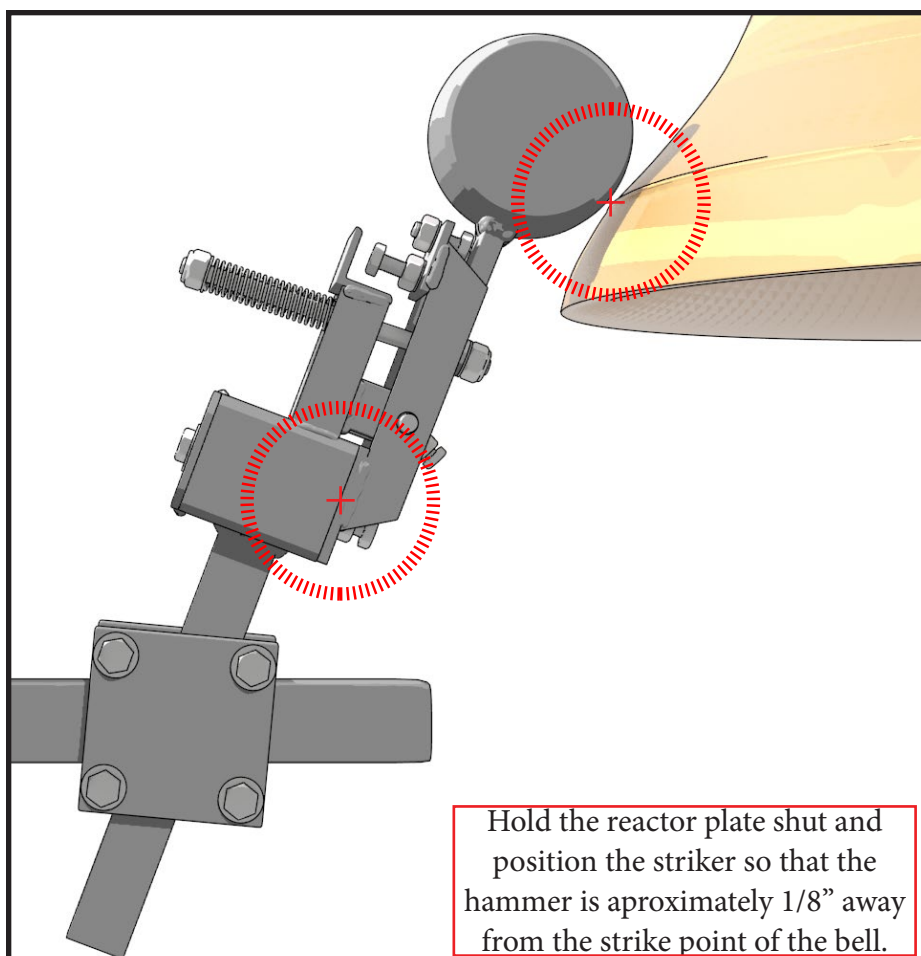
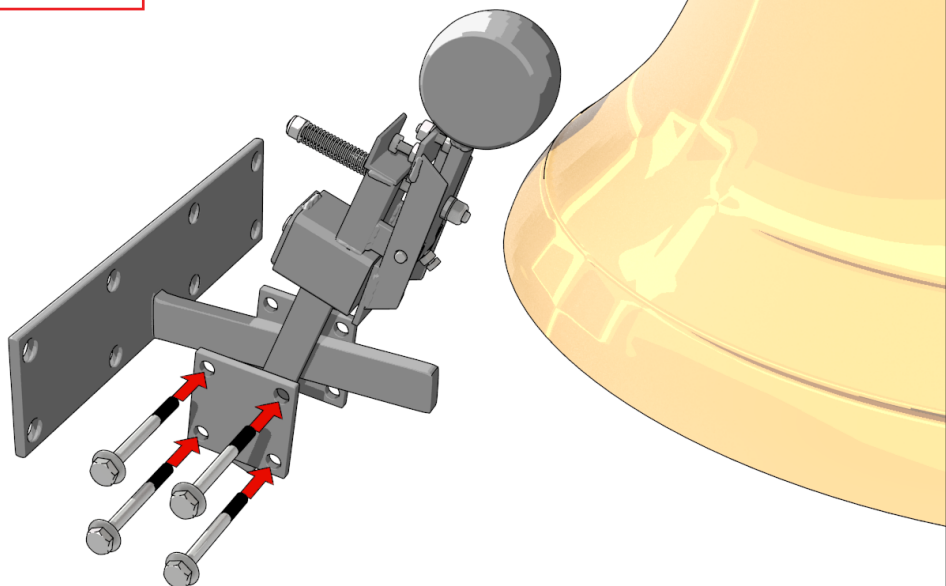



Chime Master External Hammer Installation

Position the striker so that the hammer will swing down perpendicularly toward the strike-point, this is the portion of the bell profile that is the thickest.

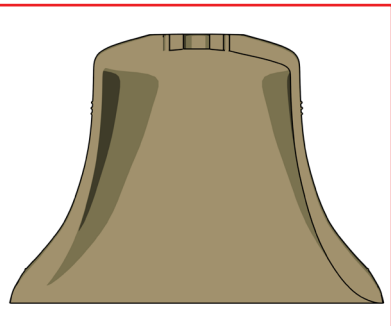

Hold the reactor plate shut and position the striker so that the hammer is approximately 1/8" away from the strike point of the bell.

Tighten or loosen the spring tension adjustment nut to increase or decrease the return strength of the striker hammer.

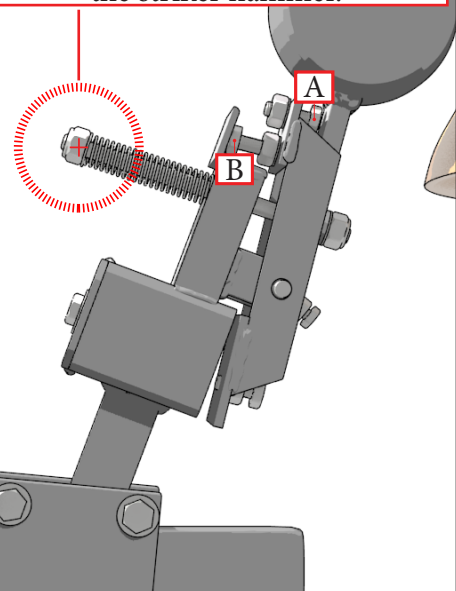

Bolt(A): Adjusts the distance of the hammer from the reaction plate.
Bolt(B): Adjusts the distance of the reaction plate from the magnet, which can increase or decrease the intensity of the strike.